
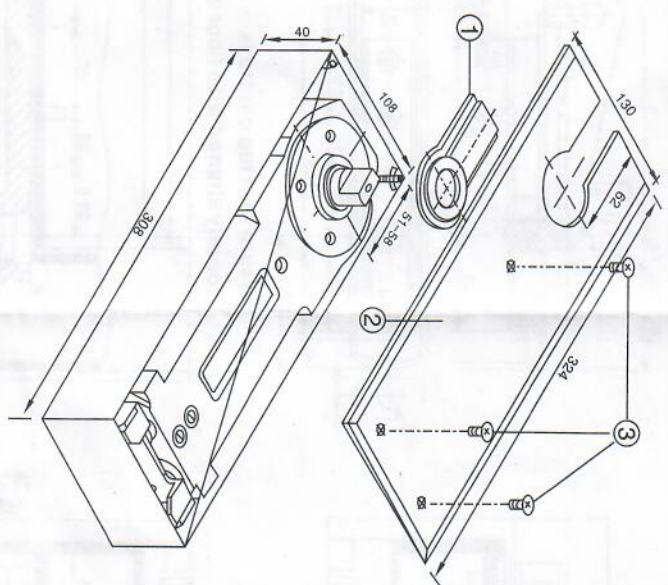


5

FIXING INSTRUCTION FOR DOUBLE ACTION DOOR

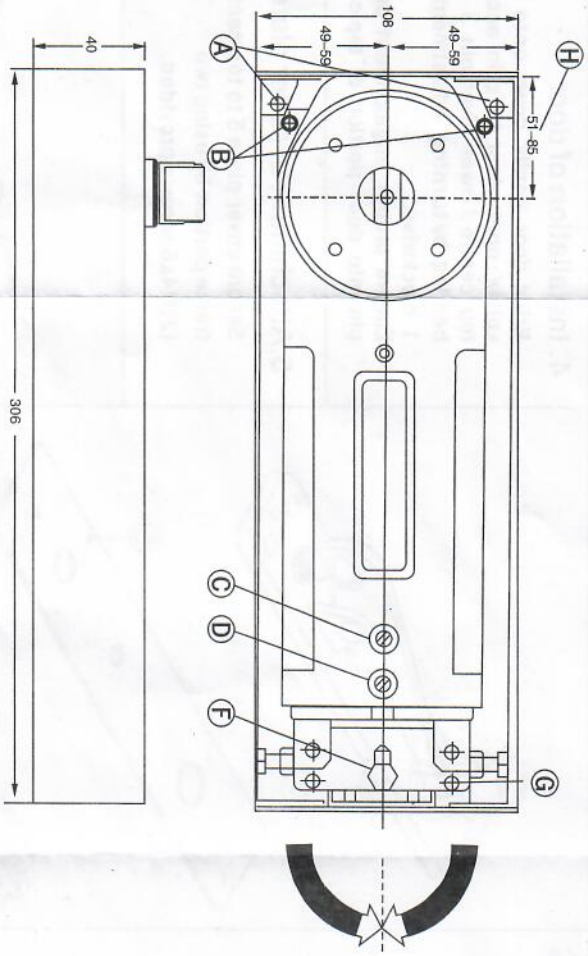

A=Fixing screw

B=Height adjustment screw

C=Regulation valve 130° ~ 20°

D=Regulation valve 20° ~ 0°

F=Fixing screw

G=Height adjustment screw

H=Pivot centre

1=Insert piece

2=Cover plate

3=Fixing screw M5x6

Adjustment in cement box

To adjust the position of floor spring in cement box, (7mm lengthx10mm widthx4mm height) loosen fixing screws (A) and (F). Move floor spring to required position and use screws (B) and (G) for height adjustment. Retighten screws (A) and (F) after adjustment.

Centre hung doors

For centre hung doors, floor spring should be in the centre of cement box. Maximum door opening angle is 130° in each direction. For doors opening up to 130°, door stop MUST be fitted. Ensure that top centre is properly aligned with floor spring.

Adjustment of closing speed.

Two regulating valves (C) and (D). ⌚ decrease closing speed, ⌚ increase closing speed.

Valve C: controlled closing range 130° ~ 20°.

Valve D: controlled closing range 20° ~ 00°.

Attachment of cover plate

Press insert piece (1) into gap behind spindle and secure cover plate (2) to floor spring with fixing screws (3).